

Getting started
with your

multi-door refrigerator



Before you start



Set up your refrigerator

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place near a grounded electrical outlet, allowing for clearances for ease of installation, proper circulation, and plumbing and electrical connections.



Before operating for the first time

 
After you remove all of the package materials, clean the inside of your refrigerator before using it. See **CARE AND CLEANING** in your Use & Care Manual.

You're in control



Your appliance control display

If you are using your refrigerator in a kitchen, we recommend you set your temperatures at 37°F (3°C) for the fresh food compartment and 0°F (-18°C) for the freezer. After 24 hours, you can adjust the control as desired, allowing the temperature to stabilize.

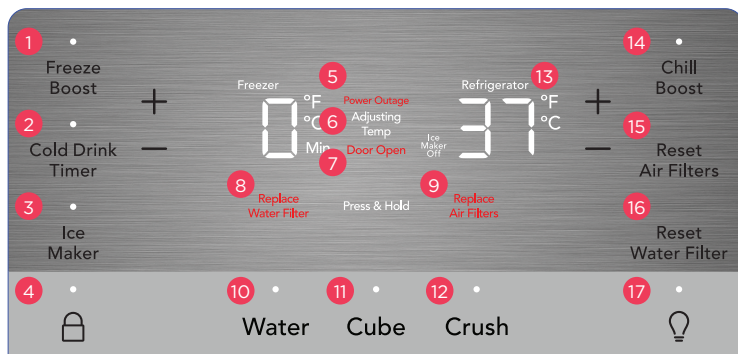

- 1 Prior to grocery shopping, we recommend you activate **Freeze Boost** to freeze your food faster.
- 2 Press **Cold Drink Timer** to start a timer for chilling drinks.
- 3 The **Ice Maker** makes ice until the ice bin is full. Press and hold **Ice Maker** for 3 seconds to turn it on/off.
- 4 Press and hold **Lock** for 3 seconds to enable/disable the appliance control display. While locked, no changes can be made until unlocked.
- 5 **Power Outage** illuminates and alert sounds after a power outage ends until you reset it by pressing any button.
- 6 Press either the **+** or **-** to adjust to desired temperature setting inside the refrigerator or freezer compartment. **Adjusting Temp** illuminates until you reach the desired temperature(s).
- 7 **Door Open** illuminates and alert sounds if the door is open 5+ minutes until you close the door.
- 8 **Replace Water Filter** illuminates when it's time to change the filter, generally every 6 months.

 
- 9 **Replace Air Filters** illuminates when it's time to change the filter, generally every 6 months.
- 10 Press **Water** to activate the water dispenser. Then press the paddle to dispense water.
- 11 Press **Cube** for cubed ice. Then press the paddle to dispense cubed ice.
- 12 Press **Crush** for crushed ice. Then press the paddle to dispense crushed ice.
- 13 **°F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).
- 14 Prior to grocery shopping, we recommend you activate **Chill Boost** to cool your food faster.
- 15 Press and hold **Reset Air Filters** for 3 seconds to reset after replacing the filter.
- 16 Press and hold **Reset Water Filter** for 3 seconds to reset after replacing the filter.
- 17 Touch **Light** to turn the dispenser light On/Off and press and hold **Light** for 5 seconds to turn ambient lighting (located in the pocket handles) on, 2 seconds to turn off.

Remember

When using the **Cold Drink Timer**, remove drinks from the freezer compartment when you hear the alarm. Carbonated drinks may explode if you leave them in the freezer too long.

Keep it fresh

Install your new PureAir Ultra II® Air Filter to keep fresh air flowing (included)

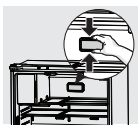


1. Squeeze the top and bottom of the air filter cover together and remove it from the liner.
2. Snap the new filter into the filter cover. The open face (carbon media) of the filter should face outward.
3. Squeeze the sides of the air filter cover and snap it back into place.
4. Press and hold the **Reset Air Filters** button on the appliance control display for 3 seconds. When the indicator turns off, the status has been reset.



PAULTRA2™


Change your filter every 6 months to ensure optimal fridge freshness.

 Safe, great-tasting water



Your PureSource Ultra® II Water Filter is certified to reduce contaminants and keep great-tasting water flowing for you and your family

 - Your new **PureSource Ultra® II Water Filter** is located at the top right corner of the fresh food compartment.
- Before dispensing water for the first time, be sure to prime the water supply system:
 1. Press and hold a drinking glass against the water dispenser paddle until water comes out (it may take up to 1½ minutes).
 2. Run water through dispenser for approximately 3 minutes or 1½ gallons, before use, and discard.

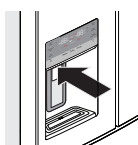

EPTWFOU1™

Change your water filter every 6 months to ensure the highest possible water quality.

Accessorize it!



Frigidaire ReadyCook™ Marinade & Oven Pan

Delicious Meals from Fridge to Oven - Prepare your favorite marinade in the pan, which slides easily into the rails underneath the refrigerator shelf. When ready, remove the lid and transfer the pan directly from fridge to oven.



Freezer Ice Maker

Additional Ice - Don't worry about running out of ice! This extra ice maker makes 2 to 2.5 lbs of ice in 24 hours, with a 4.5-lb capacity ice bin. **Remember:** Occasionally move the ice to the borders of the bin to allow the bin to fill completely.

Check out these and other great accessories for your refrigerator at Frigidaire.com or an authorized retailer!

FAQs

How do I use the reversible shelving within the Custom Flex® Temp Zone?

 
Your reversible shelves allow you to customize your storage to fit your needs. Use one side for more shelf space or easily switch it to display and chill your bottled beverages. For more information see the **STORAGE FEATURES** section of your Use & Care Manual.

Why does my refrigerator seem to run continuously?

Your refrigerator is equipped with an energy-efficient variable speed compressor. It actually saves energy running more frequently while maintaining even temperatures.



For more information refer to **TROUBLESHOOTING** in the back of your Use & Care Manual.

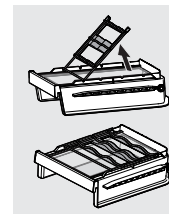

Let's make it official!

Take the first step to becoming a part of the Frigidaire family and discover more benefits by registering your multi-door refrigerator.

Look for the PhotoregisterSM icon on your registration card or register via the Frigidaire App.



We are
here
for you



Have a question?



Want help?



Need service?

Scan the QR Code to the right or visit
frigidaire.com • frigidaire.ca
for owner support

