

DRIJA

STEAM AIR FRYER CALZONE

1 YEAR
WARRANTY

4.5L



TEMPERED
GLASS



SCAN FOR
MORE INFORMATION



RANGE HOODS



COOKTOPS



MICROWAVES



OVENS



WINE COOLERS



REFRIGERATORS



WATER
HEATERS

USER MANUAL

110V / 60Hz

NOTE: To purchase accessories and / or spare parts for this product, contact us at the Contact Center (depending on the number of your country that indicates the warranty certificate or our social media)

 www.drijainternational.com


IMPORTANT INFORMATION

- Please read this manual carefully prior to use of the air fryer. This manual contains important information regarding your safety, as well as recommendations on the proper operation of the unit and its maintenance.
- Please use a separate socket, do not share the power plug with other electrical appliances.
- Do not use on an uninsulated table, or place a thermal pad under the product before use.
- This product is only for home use.
- For the first time use or when the glass pot is cooled down, you can preheat it for better effect.
- Do not touch the glass pot when cooking.
- Food must be placed on the rack and not block the air duct.
- When cooking, do not add water or other non-ventilated/ non-temperature-resistant utensils (such as plastic) to the glass pot, so as not to affect the cooking effect.
- After use, please unplug the power plug immediately.
- Please unplug the power supply and wait for the product to cool completely before cleaning.
- Do not flush the machine directly with water, you can use a wrung soft cloth to wipe the stains, do not use alcohol or volatile substances to wipe the product.
- When the product is working, the distance between the product and the wall needs to be greater than 10cm.
- If you find that the product has abnormal noise or large vibration during use, please cut off the power first, and then contact the after-sales service.
- Do not use a damaged power supply or power plug to avoid electric shock and fire.
- This product is not intended for use by children, persons with disabilities, mental disabilities, and lack of relevant experience and knowledge, unless someone has instructed and supervised them how to use this product safely.
- If the power cord is damaged, it must be replaced by professionals such as the manufacturer and its maintenance department.

PRODUCT PARAMETER

PRODUCT NAME	MODEL	VOLTAGE	FREQUENCY	POWER
Steamer Air Fryer	Calzone	110V	60Hz	1200W

PRODUCT OVERVIEW

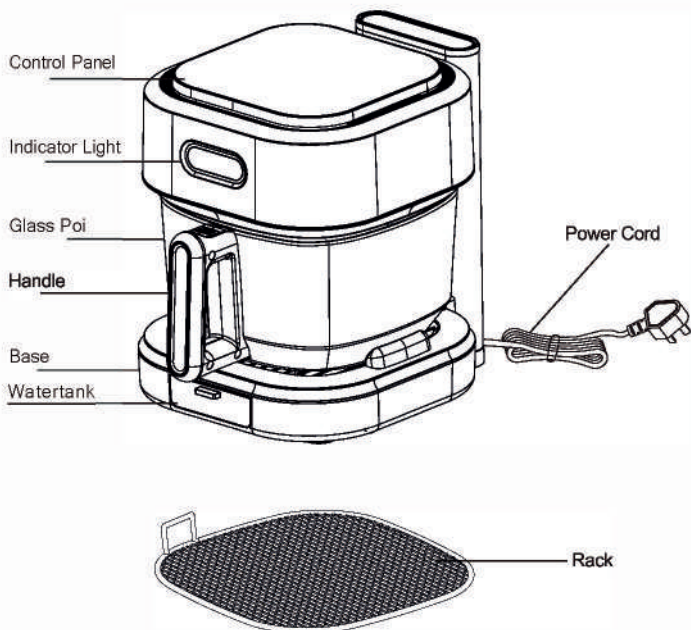


NOTE: The product picture is for reference only. Everything is subject to the actual product and accessories.



KIND TIPS


The supplier has the right to change the design of the product. The product you purchased may be improved, and it is not completely consistent with the manual, but it will not change the performance and usage of the product. Please use it with confidence.

CONTROL PANEL

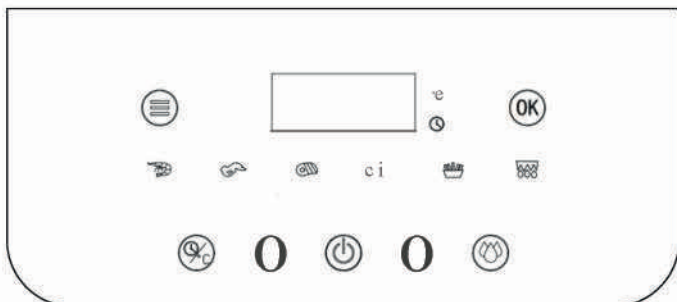


INSTRUCTION


1. Hold the handle and pull out the glass pot

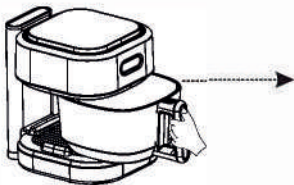


2. After cleaning the rack and glass pot, put the rack into the glass pot.

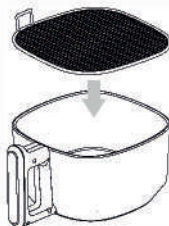


3. Spread the prepared food evenly into the rack

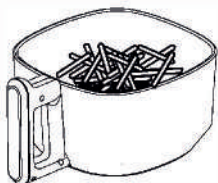


4. After placing the food, push the glass pot into the main unit

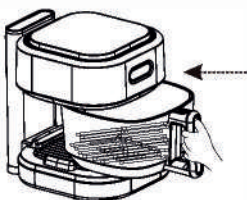


5. Connect the power supply, insert the plug into the power socket

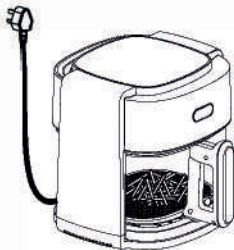


6. Under the standby mode, press " @ " button to select program

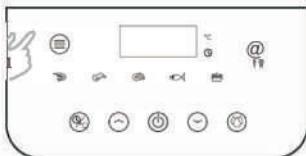

7. You can select the desired program by yourself, and the corresponding indicator lights up after selection.

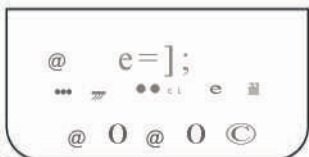



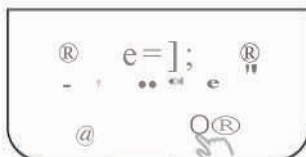



8. After selecting the program, press " @ " and " + - " to set the cooking time and temperature. At the same time, according to the state of the food during use, press the " @ " button to add moisture




NOTE: After selecting the program, and the press the " @ " button, the machine will automatically humidify during the frying process.


INSTRUCTION

PROGRAM/TEMPERATURE/TIMER


Program	Default Temperature	Temperature Tange	Default Time	Time Setting Range
	200°C	60°C-200°C	8 mins	1-60 mins
	180°C	60°C-200°C	15 mins	1-60 mins
	200°C	60°C-200°C	30 mins	1-60 mins
	180°C	60°C-200°C	13 mins	1-60 mins
	190°C	60°C-200°C	11 mins	1-60 mins
	60°C	60°C-200°C	15 mins	1-60 mins

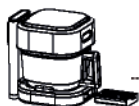

- Take out the water tank

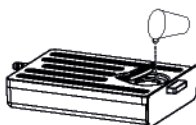


- Open the silicone plug and fill with water

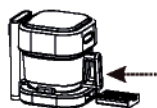


- Return the water tank to its original position

- If you need to flip the food during use, please hold the handle and put out the glass pot, and then put the glass pot into the main unit when finished. (Food Flipping Reminder: The machine will beep three times, when 1/3 of the set time is left)

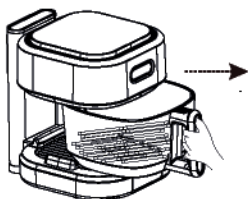

- After cooking, the product goes to standby, pull out the glass pot and place it on a heat-resistant platform. When the product is not in use, please unplug the power cord.

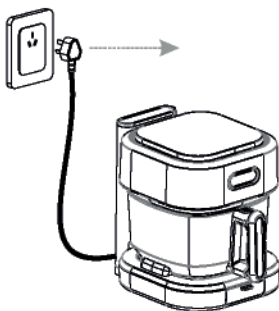

KIND TIPS

NOTE: DO NOT TOUCH THE GLASS POT WHEN HEATING !

1. Please wait until the glass pot cools down before cleaning
2. The product exhaust vent should not be close to the wall
3. Be careful with the exhaust vents and the steam discharged to avoid burns !

CLEANING AND MAINTENANCE

1. Please unplug the power supply and wait for the product to cool completely before cleaning.
2. The glass pot and rack can be washed in the dishwasher.
3. Please avoid hitting the glass pot when cleaning.
4. After cleaning, wipe the glass pan, grill, etc. with a dry cloth.

FAILURE ANALYSIS

Failure	
Smoke and smell when using the machine for the first time	When using for the first time, bake for 5 minutes without food, so as to completely evaporate the protective grease of the parts
The machine does not work	Check whether the plug is properly inserted into the socket and whether the glass pot is placed correctly
The machine does not heat	Check whether the switch is activated and whether the carbon fiber heating tube is illuminated
	If the heating tube does not light up, please contact the after-sales service
Glass pot is broken	Please contact the after-sales service

- If you still have problems in use, please contact the after-sales service