



UPPER DUCT COVER MOUNTING TEMPLATE

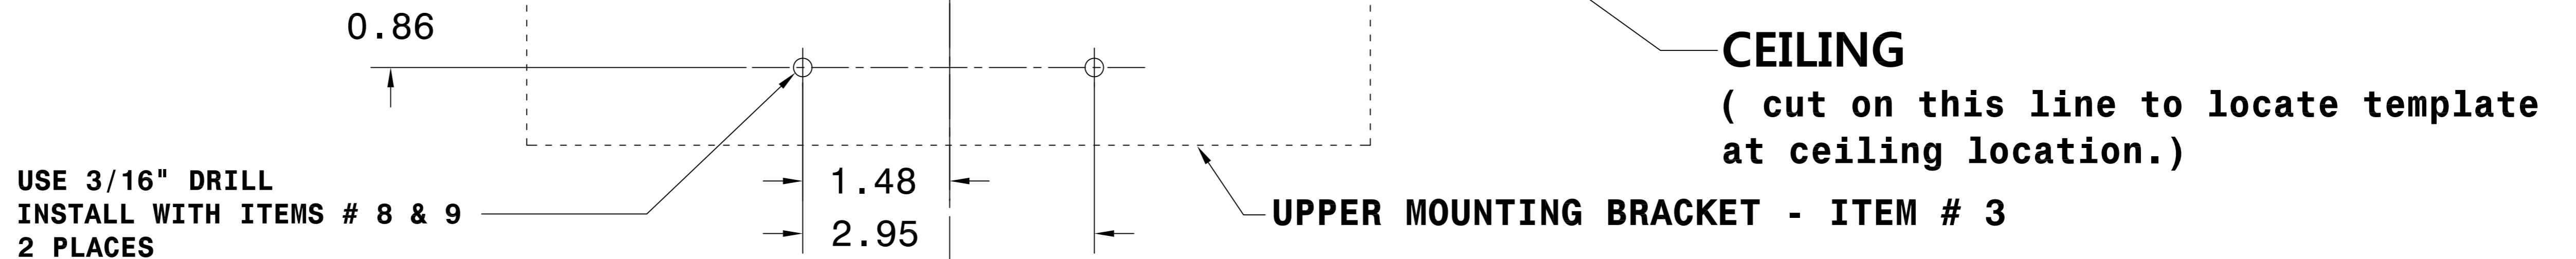

Note: Place this template in ceiling corner to mount upper bracket for chimney cover.

CUT ALONG THIS LINE

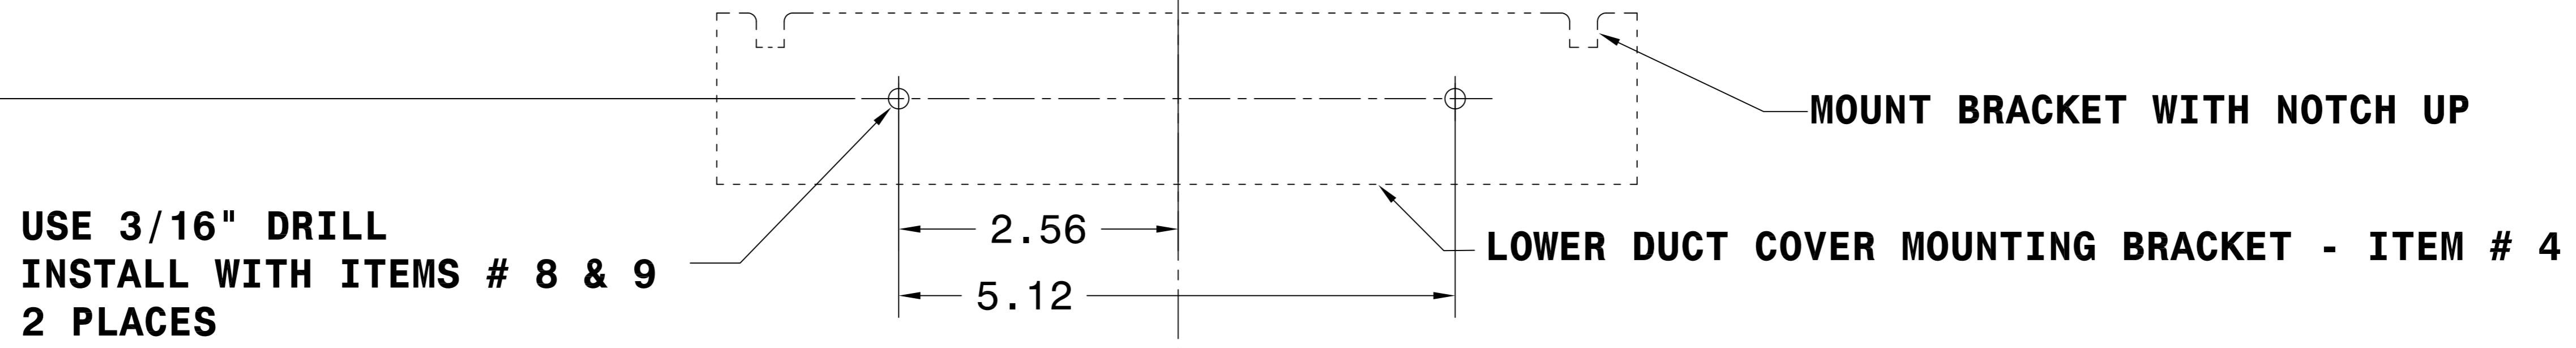


RANGE HOOD LOCATION INSTRUCTIONS:

- LOCATE CENTER OF COOKTOP
- DRAW VERTICAL LINE ON WALL TO CEILING
- FROM INSTALLATION GUIDE CHART - DETERMINE DESIRED VENT HOOD HEIGHT
- DRAW HORIZONTAL LINE AT THIS HEIGHT
- LOCATE AND TAPE TEMPLATE TO THE WALL FOR PROPER INSTALLATION
- REFER TO INSTALLATION MANUAL FOR PROPER ASSEMBLY

NOTE: LOWER AND UPPER MOUNTING HOLES ON RANGE HOOD BODY SHOULD BE ATTACHED TO WOOD STRUCTURE TO SUPPORT 150 LBS.
REFER TO INSTALLATION GUIDE FOR DETAILS

15.67

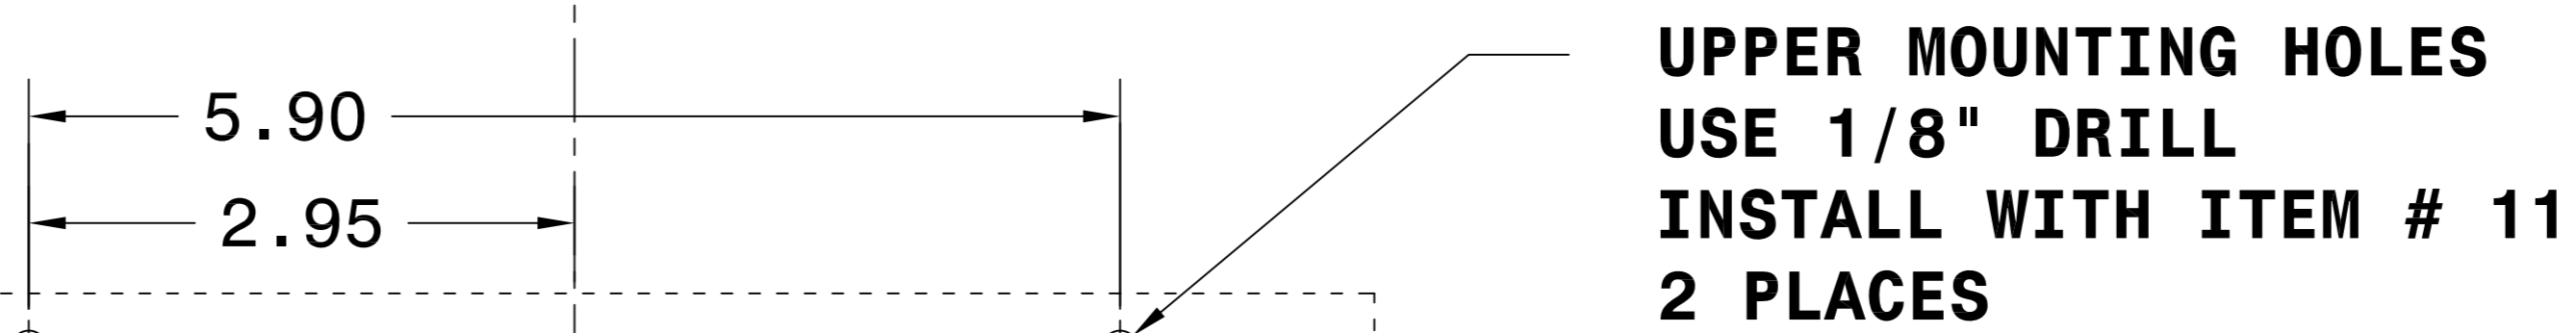

7.88

UPPER MOUNTING HOLES
USE 1/8" DRILL
INSTALL WITH ITEM # 11
2 PLACES

21.46

10.73

1.69

BOTTOM OF RANGE HOOD
(cut on this line to locate templates
at correct installation height.)

CENTERLINE OF PRODUCT LOCATION SHOULD MATCH CENTER OF COOKTOP